

# LOUIS J. SOLOMON

## DESIGN YOUR OWN SOFA/CHAIR: CONTEMPORARY

### 1. Choose your depth

Standard:

Overall depth: 38.5"

Heights vary based on base style


Deep:

Overall depth: 42.5"

Heights vary based on base style

### 2. Choose your frame


(Dimensions vary based on arm style and depth)

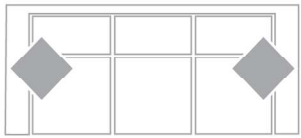


Three cushion sofa  
84.5-99"W




Two cushion sofa  
78-86.5"W

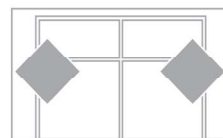

Loveseat  
60-72.5"W

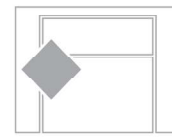

Chair & 1/2  
44.5-53"W

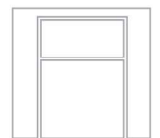


Chair  
35.5-46"W




Right arm davenport  
91-103.5"W



Left arm davenport  
91-103.5"W

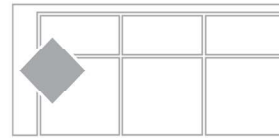


Left arm sofa  
79-90"W

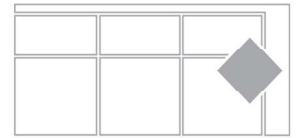


Right arm sofa  
79-90"W




Curved corner  
73.5/  
78.5"W

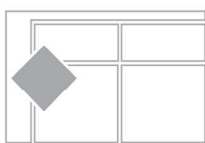


Left arm loveseat  
55-63.5"W

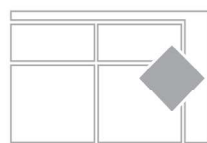

Right arm loveseat  
55-63.5"W




Left arm chair  
30-37"W




Right arm chair




Armless chair  
24.5/  
26.5"W

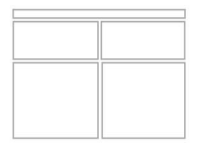

Armless loveseat  
49/53"W

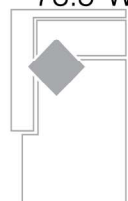


Left arm chaise  
33-38"W

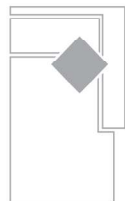


Right arm chaise  
33-38"W



Armless loveseat  
62.5"W

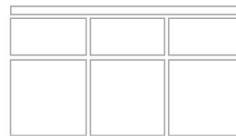

Armless sofa  
73.5/79.5"W

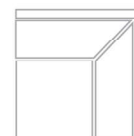

Corner chair  
38.5/  
42.5"W



Ottoman  
34" x 26"



Ottoman  
38" x 26"

3. Choose your arm style



Crossover



Track



Roll



Sloped



Saddle

4. Choose your back style



Box Border



Knife Edge

5. Choose your tailoring (On seat cushions, back cushions, toss pillows, and arms)



Welted



Unwelted

6. Choose your base: Available in any Contemporary Line finish except Natural



Concealed



Square



Angled